


ASSEMBLY

1) Unpack the balance

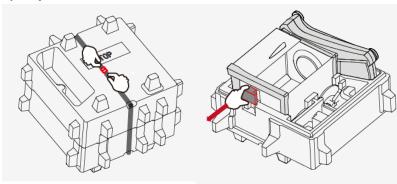

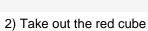

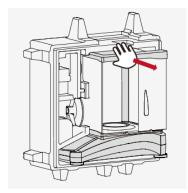


3) Take out the balance

For 1mg and 0.1mg Models:


1) Remove the binder



2) Install Wing ring and weighing pan

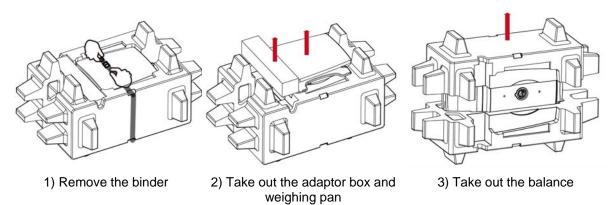

For 0.1g and 0.01g Models:

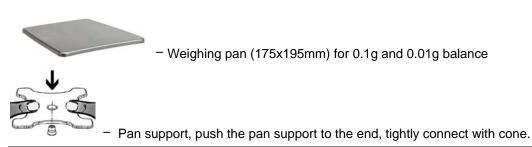



Quick Start Guide

SAFETY PRECAUTIONS



CAUTION: Read all safety warnings before installing, making connections, or servicing this equipment. Failure to comply with these warnings could result in personal injury and/or property damage. Retain all instructions for future reference.


- Verify that the AC adapter's input voltage range and plug type are compatible with the local AC power to be used.
- Make sure that the power cord does not pose a potential obstacle or tripping hazard.
- The balance is for indoor use only.
- Use the balance only in dry locations.
- Do not drop loads on the pan.
- Use only approved accessories and peripherals.
- Operate the equipment only under ambient conditions specified in these instructions.
- Disconnect the equipment from the power supply when cleaning.
- Do not operate the equipment in hazardous or unstable environments.
- Service should only be performed by authorized personnel.
- Do not position the balance such that it is difficult to reach the power connection.

CONTROLS



Button	Action
0	Short Press (if powered Off): Turns on the scale Long Press (if powered On): Turns off the scale Note: The balance will automatically power on when power is connected.
Print	Short Press: Prints the present data to a printer or a computer.
Zero	Short Press: Perform Zero operation
Cal	Short Press: Perform Calibration operation
Tare	Short Press: Perform Tare operation

Main Application Screen

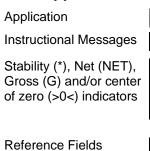



Main Menu

Calibration

Communication

Capacity and readability

Result Field: Information varies by application

Touch **g** to change unit

Application Buttons:

Functions vary by

Data Maintenance

Lockout

MENU & SCREEN NAVIGATION

Touch Menu to open the menu list.



Calibration:

Touch to view calibration options.



Balance Setup:

Touch to view and change balance settings.



Weighing Units:

Touch to view and change weighing units.



Data Maintenance:

Touch to view data maintenance settings.



GLP and GMP Data:

Insert user data for traceability.



Factory Reset:

Touch to do a Factory reset of menu settings.

Weighing Units

Factory Reset

Exit



Lockout:

Balance Setup

GLP and GMP Data

Back

Touch to view lockout options.



Communication:

Touch to view COM Device Settings and Print Settings.



Quick Start Guide

APPLICATIONS

The balance can be configured to operate in various Application modes. Touch the top left Application field (weighing in the example below):





The Adventurer Balance has 9 application modes, as follows:













Weighing

Parts Counting

Percent Weighing

Dynamic (Animal) Weighing

Density Determination

Check Weighing







Display Hold


Totalization/Statistics

Formulation

Connecting the Interface

Use the built-in RS-232 Port to connect either to a computer or a printer with a standard (straight-through) serial cable. Or connect using the scale's USB port.

Interface connections on the rear of the balance:

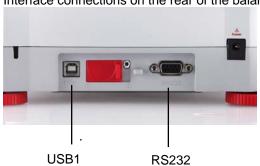

USB1: Used to connect to PC only RS232: Used to connect to PC or Printer USB connection on the front of the balance:




USB2: Used to connect a USB flash driver only



Weigh Below Hook

To use this feature, remove power from the balance, then remove the protective cover for the weigh below opening.

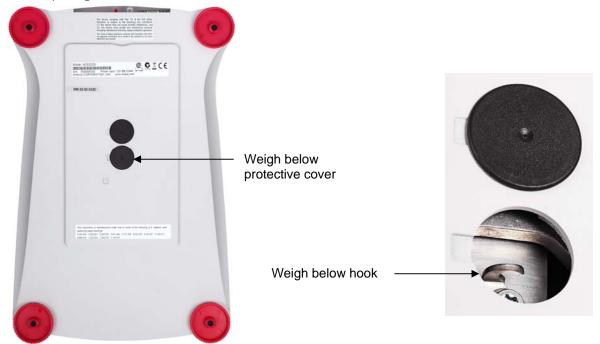

Adventurer[™] Balances OHRUS



Quick Start Guide



Ohaus Corporation 7 Campus Drive Suite 310 Parsippany, NJ 07054 USA Tel: (973) 377-9000

Fax: (973) 944-7177 With offices worldwide.

www.ohaus.com



P/N 30111760A © 2014 Ohaus Corporation, all rights reserved.