



OHAUS Aviator™ 5000

Standard Price Computing Retail Scale



Fast and Easy – Mobile Speed

Aviator™ 5000 is a robust, accurate digital price computing scale. Its modern, ergonomic design coupled with battery operation make it both a stylish and efficient tool for mobile selling. Its high quality weighing technology, approved and certified by weights and measures authorities, means it maintains the highest accuracy and allows quick data signal processing. This precision scale complies with the latest industry standards including 10V/meter OIML regulations. In addition features like the power adapter with Power Efficiency Level V and RoHS compliant components show our commitment to electronic safety, accuracy and environmental care.

Standard Features Include:

- **Robust and Mobile** – Items of various shapes and sizes can be weighed easily thanks to the large, robust stainless steel weighing plate. The high quality of the stainless steel means it is water resistant and easy to keep hygienic for food safety. For even greater protection optional scale and PLU covers are available. The included rechargeable battery also allows for complete mobility.
- **Easy to Read LCD Display** – The three displayed lines are very clear and easy to read. The bright backlight can be switched on or off, according to the environmental conditions whilst the sleep mode helps to minimize power consumption when the scale is not in use.
- **Advanced Membrane Keyboard** – The quick price and function keys on the advanced membrane keyboard speed up the workflow and reduce operation time.
- **Reliable Performance** – OHAUS' long-term experience in engineering precise weighing instruments ensures fast customer transactions and long-lasting performance. Aviator 5000 stands for customer-friendly functionality and operation.

OHAUS Aviator™ 5000 Standard

Key Features and Benefits

Weighing Ranges

Aviator 5000 is available as compact model with the following weighing ranges: 12kg/2g or 15kg/5g.



Advanced Membrane Keyboard



With its memory of 50 PLU and 32 preset keys, Aviator 5000 is able to perform numerous operation functionalities like calculating exchange rates with a special Euro key, weighing with 100g price unit, setting tares or zeroing. In addition, an exchangeable preset card enables the user to customise the preset keys.

Backlit Display

Aviator 5000's bright easy to read LCD display contains three lines: a 6-digit weight line; a 6-digit unit price line; and a 7-digit total price line. The backlight can be switched on or off according to the ambient lighting and to save power the scale automatically goes into the sleep mode when not in use.



Ergo Grips



Two ergonomic grips on the lower side of the scale combined with its light net weight of only 4.2kg make it extremely easy to transport.

Mobile Business Through Battery Support

For complete mobility, the scale can be run via rechargeable battery. Every scale order already includes a rechargeable battery with a long-lasting operation time of up to 180 hours (Measured with backlight off. With backlight on: up to 90 hours).



Cable Case



With built-in cable storage, your work area is kept tidy, transportation is simple and the risk of mislaying the power cable is eliminated. To help avoid accidental damage, the power plug is also specially protected.

Price Computing Retail Scale

Applications

Aviator 5000 is a stylish, portable retail scale suited to a range of retail environments such as open markets, mobile business or smaller specialty shops. Its robust yet lightweight construction, including a high quality stainless steel plate, make it perfect for these kinds of environment where food hygiene, portability and sturdiness are prerequisites. Coupled with its high quality weighing technology this makes the Aviator a reliable and long lasting investment. Using the scale is also fast and effortless thanks to its ergonomic keyboard layout and simple user interface - thus speeding up customer service in all applications.



Fruit & vegetable markets



Easy to adjust feet



Easy to carry scale thanks to two grips on the lower side



Mobile business with rechargeable battery



Exchangeable preset card



Sweet shop



Sweets, tea, chocolate


Aviator™ 5000 *Standard Price Computing Scale*

Specifications

Model	A51P15L	A51PH12L
Capacity	15kg/5g	12kg/2g
Display	LCD with backlight; 6-digit weight, 6-digit unit price, 6-digit total price	
Key	32 membrane keys	
Preset Key	16 keys: one key can store one PLU	
Stainless Steel Pan	240 x 337 mm (trapezoid)	
PLU Quantity	50	
Power	Power adapter: 100~240VAC, 50/60Hz Battery: 6VDC/4.5AH lead-acid rechargeable battery (included)	
Gross Weight/Net Weight	Gross weight: 6.1kg / Net weight: 4.2kg	
Shipping Box (L x W x H)	480mm x 465mm x 180mm	
Working Environment	Temperature: -10°C~+40°C; Humidity: 85%RH, non-condensation	
Storage Environment	Temperature: -25°C~+50°C; Humidity: 85%RH, non-condensation	
Weighing Function	Zero, Tare, 100g*, Change*, Hold*, Euro*, 1/2lb*, 1/4lb*, kg/lb*	
Communication	None	

*not available in all countries

Outline Dimensions

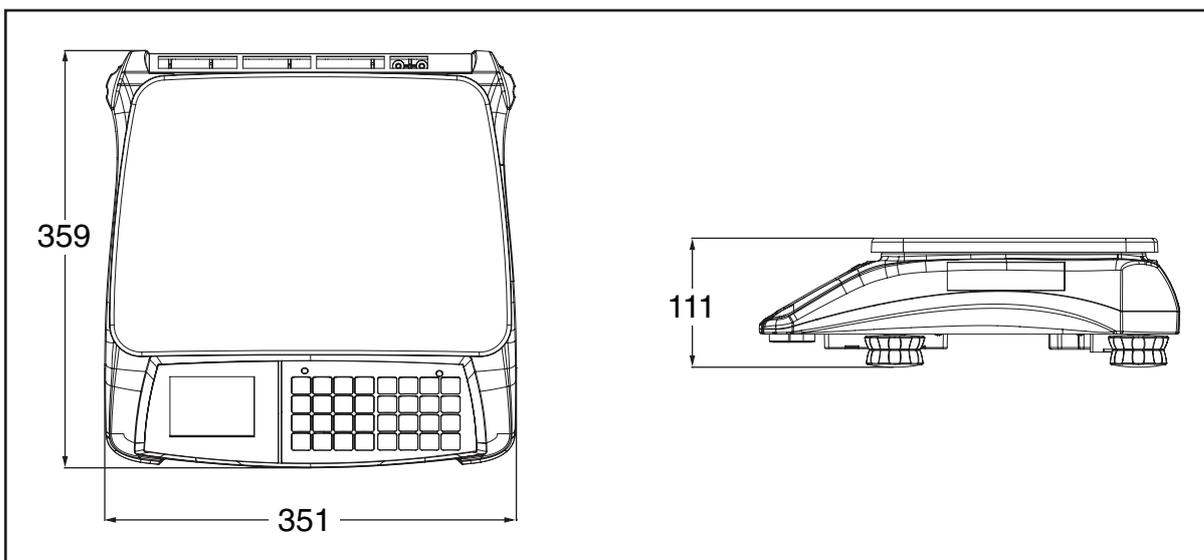

Accessories

	OHAUS Number
Lead acid rechargeable battery	72168359
Plastic cover for pan	72247039
Plastic cover for housing	72247038
Deep plate	72247115

Document is subject to technical changes

www.ohaus.com

* ISO 9001:2008
Registered Quality Management System

80774567 © Copyright Ohaus Corporation

